


Component key for wiring diagrams 30 to 52

Note: Not all the items listed will be fitted to all models

No	Description	No	Description	No	Description
1	Injector cooling fan	47	Windscreen wiper motor	F	Rear foglamps/headlamp washer intermittent device switch
2	Left front light cluster	48	Headlamp washer pump	G	Headlamp dip switch
3	Left foglamp	49	Fuel injector	H	External lights switch
4	Left front engine compartment earth	50	Fuel injector	I	Flasher switch
5	Radiator cooling fan	51	Fuel injector	92	Foglamp relay
6	Double contact thermostatic switch on engine radiator	52	Fuel injector	93	Electric fuel pump relay
6A	Thermostatic switch on engine radiator	53	Supplementary air valve	94	Electric windows relay feed
7	Left horn	54	Spark plug	95	Headlamp wash/wipe intermittent device
8	Right horn	55	Spark plug	96	Direction indicators/hazard warning lights flasher unit
9	Resistor for engaging radiator fan 1st speed	56	Spark plug	97	Central locking receiver
10	Right front light cluster	57	Spark plug	98	Central locking control unit
11	Right foglamp	58	Excess supercharging pressure switch	99	Join with brake pad cables
12	Right front engine compartment earth	59	Throttle position switch	100	Join between engine cable and dashboard cables
13	Battery	60	Engine speed sensor	101	Automatic heater cable join
14	Ignition coil	61	Ignition diagnostic socket	102	Instrument panel
15	Ignition distributor with magnetic impulse generator	62	Connector block	A	Foglamps warning light
16	Left front side direction indicator	63	Connector block	B	Main beam headlamps warning light
17	Ignition power module	64	Alternator	C	Side lights warning light
18	MPi electronic injection control unit	65	Thermostatic switch for injector cooling fan	D	Rear foglamps warning light
19	Join between injection/ignition cables in engine compartment	66	Right brake pad wear sensor	E	Heated rear screen warning light
20	Battery cables join in engine compartment	67	TDC sensor	F	Hazard warning lights warning light
21	Antiskid braking system wiring join	68	Connector block	G	Direction indicators warning light
22	Starting go-ahead relay	69	Connector block	H	Handbrake applied and insufficient brake fluid level warning light
23	Earth for battery	70	Connector block	I	Choke warning light
24	Radiator coolant temperature sender unit for electronic injection	71	Connector block	K	Instrument panel light bulbs
25	Anti-knock sensor	72	Join with right brake pad cables	L	Battery recharging warning light
26	Injection system diagnostic socket	73	Electronic earth	M	Insufficient engine oil pressure warning light
27	Switch signalling insufficient engine oil pressure	74	Power earth	O	Antiskid braking system failure warning light
28	Radiator coolant temperature sender unit	75	Brake stop-lamp switch	P	Maximum turbocharging pressure warning light
29	Engine oil temperature sender unit	76	20 A fuse for central locking	Q	Brake pad wear warning light
30	Engine oil pressure sender unit	77	10 A fuse for electric fuel pump	R	Door ajar warning light
31	Right front side direction indicator	78	30 A fuse for radiator cooling fan	U	Fuel level gauge
32	Engine oil temperature sender unit cable join	79	30 A fuse for electric windows	V	Engine oil pressure gauge
33	Battery recharging signal cable join	80	10 A fuse for injector cooling fan	W	Engine oil temperature gauge
34	Windscreen washer pump	81	20 A fuse for headlamp wash/wipe	Y	Tachometer
35	Rear screen washer pump	82	20 A fuse for foglamps	Z	Coolant temperature gauge
36	Reversing switch	83	20 A fuse for foglamps	103	Join with remote control central locking cables
37	Fuel injectors relay feed	84	Junction box with fuses and relays: E1 Horn relay (for single tone horns bridge between 86 and 87)	104	Cigar lighter
38	Insufficient brake fluid level sensor	85	E2 Heated rear screen relay	105	Radio receiver
39	Left brake pad wear sensor	86	E3 Heater (bridge between 85 and 30)	106	Heater unit
40	Microplex electronic ignition control unit	87	84 Join between front cable and rear cables	107	Switch unit
41	Injection cables join in engine compartment	88	85 Join between front cable and door ajar sensor cables	A	Heated rear screen switch
42	Ignition cables join in engine compartment	89	86 Earth on dashboard, left hand side	B	Rear foglamps switch
43	Join between battery cable and injection cables	90	87 Earth on dashboard, right hand side	C	Switch unit light bulb
44	Join between engine cable and battery cables	91	88 Choke warning light switch	D	Rear screen wiper switch
45	Left front brake pad cables join	89	89 Ignition switch	E	Foglamps switch
46	Starter motor	90	90 Hazard warning lights switch	F	Clock
		91	91 Steering column switch unit	108	Left front electric window motor
		A	A Rear screen wash/wipe switch	109	Left front central locking geared motor
		B	B Horn button	110	Switch signalling left front door ajar
		C	C Direction indicators switch		
		D	D Windscreen wiper intermittent speed selector switch		
		E	E Windscreen/headlamp washer control switch		

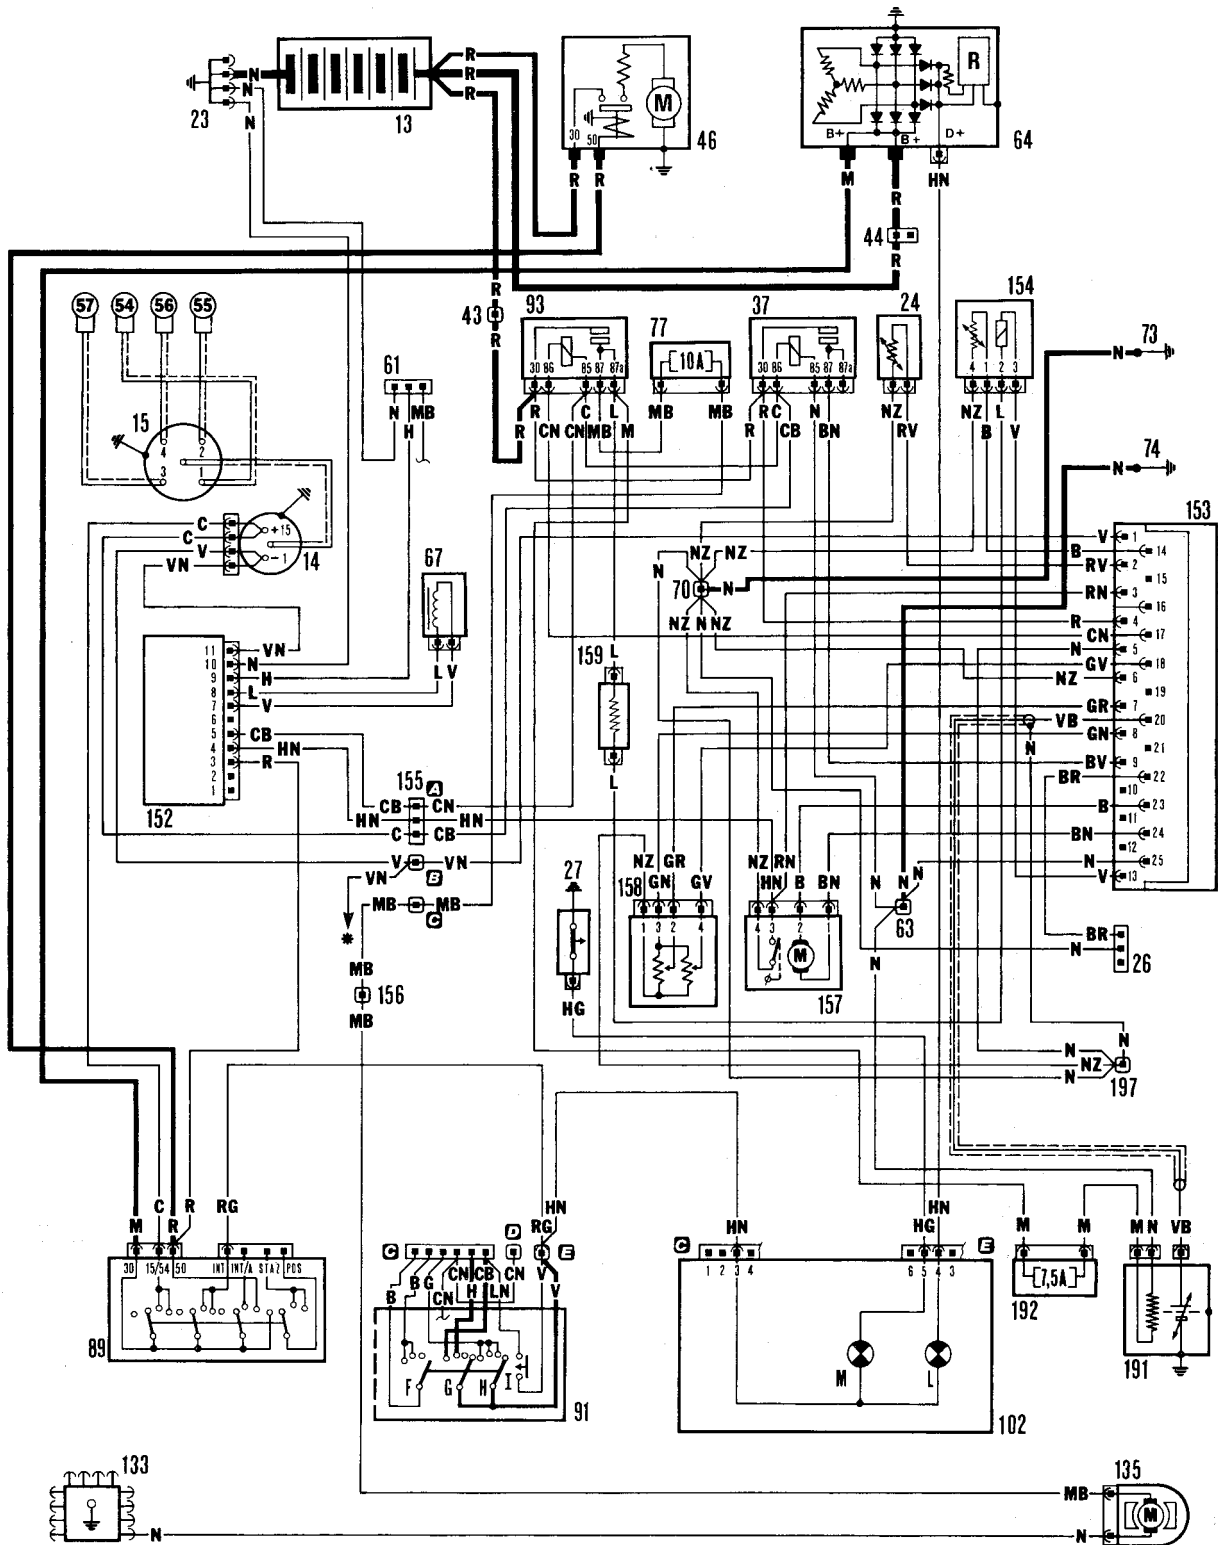

* To the rev counter

Wiring diagram 31 - starting, charging, Digiplex 2 ignition, SPi fuel injection, fuel pump and low oil pressure (1990-on 70 SX and 1.4 models)